

⚠ DANGER

Electrocution hazard. Do not contact power lines. Stay back from high voltage wires at least 17 feet.

100139.eps

⚠ WARNING

Collision hazard. Maintain a safe distance from obstructions.

100134.eps

Next, actuate the boom #2 control as shown. This will *extend section #2* until it is at an angle of about 90° to section #1. Section #2 must be extended far enough so that when you unfold section #3, its tip will completely clear section #1. (Figure 52)

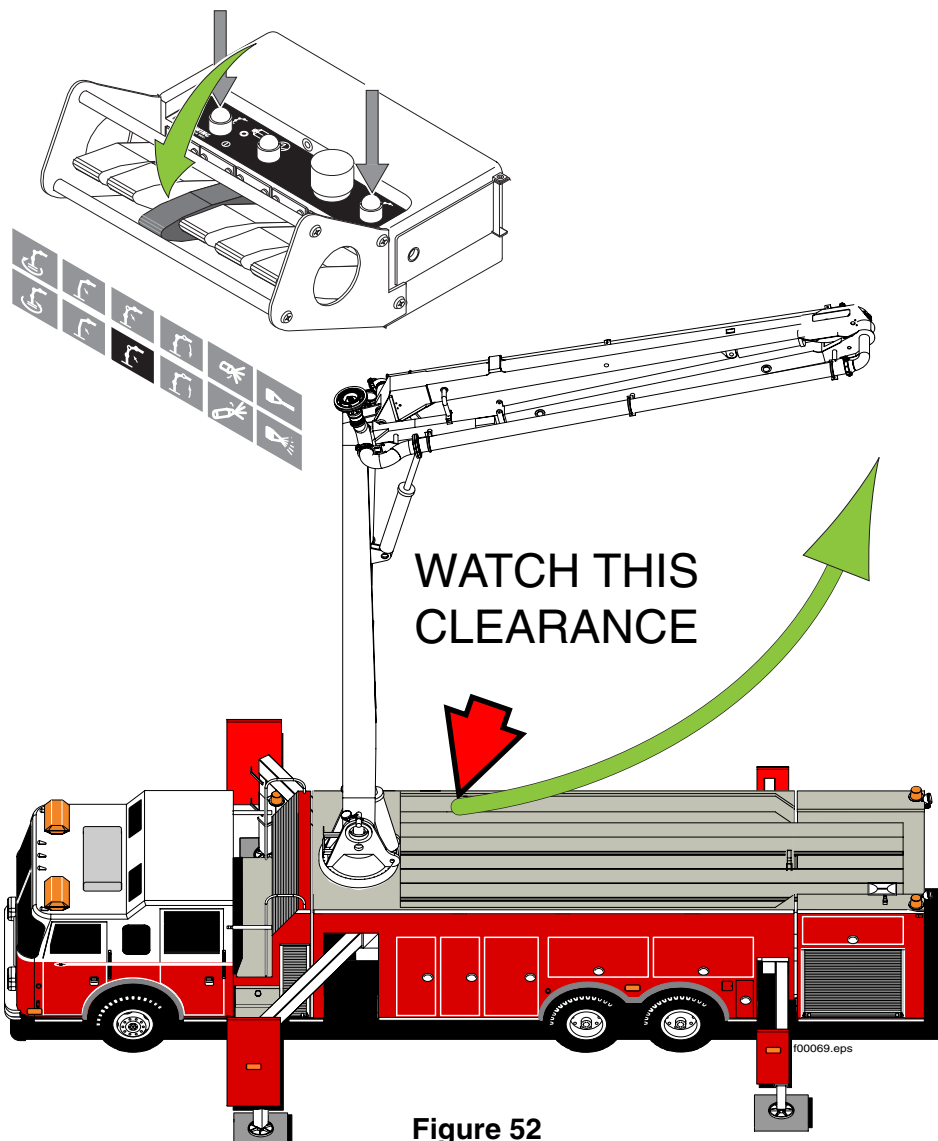


Figure 52
 Extend section #2 to about 90°, then unfold section #3.